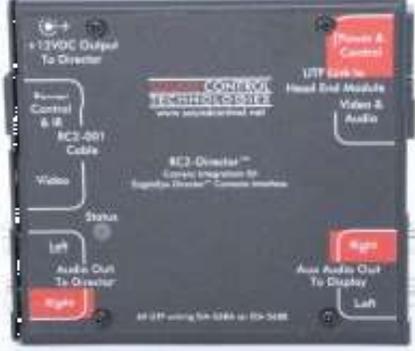


Thank you for choosing the Sound Control Technologies' RemoteCam4™ camera integration kit!


Included in each RC2-Producer™ kit will be:

<ul style="list-style-type: none"> • 1 Power Supply & cord (Currently all RemoteCam Kits utilize the WPS-12) to provide power for the RemotCam4™ electronics as well as the remote camera up to 300' from the head end. All the RemoteCam™ kits use the same power supply. The power supply is AC 100-240V~47-63HZ compliant. 	
<ul style="list-style-type: none"> • 1 RemoteCam2™ Head End Module (RC2D-HE) which provides system power, control interface (RX, TX, GND & IR) for the camera & one Component Analog video output for the codec. 	
<ul style="list-style-type: none"> • 1 RemoteCam2™ Camera Module with PowerSniffer™ (RC2D-CE) that provides camera power, control (RX, TX, GND & IR) and Component Analog video input for the camera 	
<ul style="list-style-type: none"> • Documentation 	
<ul style="list-style-type: none"> • Specific cables (P/N according to the following chart) 	

Company	Codec	Camera	SCT Kit	Cables
Polycom	HDX Series Group Series	EagleEye III Producer	RC2-Producer	RC2-001 RC2-101 RC2-120 PPC-002

To proceed with the installation, insure that you have installed one CAT5e or CAT6 cable between the camera installation site and the codec installation site.

The cable **must** be wired for either UTP 568A or UTP 568B. For your convenience, you can use the following scheme:

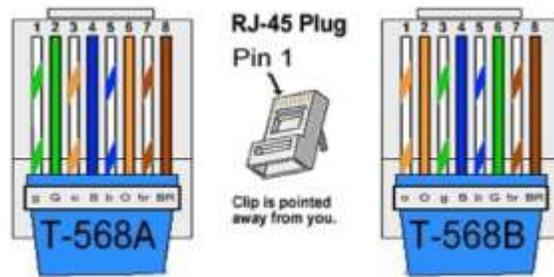

To install the RC2-Producer™ Kit, follow this step-by-step guide:

<ul style="list-style-type: none"> • Step 1 • Test and verify the Cat5e or Cat6 cables for UTP 568A or 568B wiring.
<ul style="list-style-type: none"> • Step 2 • Install the RC2D-HE Head-End Module at the rack/equipment location. <ul style="list-style-type: none"> • Connect the power Cat5e or Cat6 cable to the RC2-HE module. • Connect the power supply to the RC2D-HE Module.
<ul style="list-style-type: none"> • Step 3 • Using the PowerSniffer™, at the camera location connect to the UTP power cable. It should display 4 green LED's. <ul style="list-style-type: none"> • Any other result, please re-terminate.
<ul style="list-style-type: none"> • Step 4 • Disconnect the power supply from the RC2-HE
<ul style="list-style-type: none"> • Step 5 • Connect the CAT5e or CAT6 cables to the RC2D-CE Camera Module.
<ul style="list-style-type: none"> • Step 6 • Connect SCT RC2-101 cable between codec and RC2D-HE module.
<ul style="list-style-type: none"> • Step 7 • Connect Polycom provided HDCI cable between camera and Producer module. <ul style="list-style-type: none"> • Connect SCT RC2-001 cable between Producer and RC2D-CE module. • Connect SCT PPC-002 Power cable between Producer and RC2D-CE module.
<ul style="list-style-type: none"> • Step 8 • Connect the power supply to the RC2D-HE module <p>Head-End Module: 2 LEDs</p> <p>The left LED will turn on when powered. Link is present when LED blinks (stays solid with brighter blink). Press Cable Adapt button for 1 second. Both LED's will turn on. Link is present when left LED blinks (displays solid with brighter blink)</p> <p>To reset calibration: Press and hold cable adapt until left LED displays solid.</p> <p>Camera Module</p> <ul style="list-style-type: none"> • LED will be Red until link is established. Solid Green when link is active.
<ul style="list-style-type: none"> • Step 9 • Enjoy!